



## Semi flush-mount room thermostat

### RDU340

- for CAV / VAV heating and cooling systems
- for AHU systems
- for universal heating and cooling systems

- 
- Modulating PI control
  - Control depending on the room or the return air temperature
  - Output for a DC 0...10 V actuator and AC 230 V electric heater (ON/OFF)
  - Automatic or manual heating/cooling changeover
  - Operating modes: Comfort, Economy and Protection
  - Two multifunctional inputs for keycard contact, external sensor, etc.
  - Adjustable commissioning and control parameters
  - Minimum and maximum setpoint limitation
  - Adjustable minimum and maximum limitation for air flow signal DC 0...10 V
  - Output signal inversion as an option (DC 0...10 V → DC 10...0 V)
  - Mounting on recessed rectangular conduit box, 60.3 mm fixing centers
  - AC 24 V operating voltage

## Use

---

Control of the room temperature in individual rooms of ventilation or air conditioning plants that are:

- Heated or cooled by single duct.
- Heated or cooled by single duct with electric heater.

The RDU340 is suitable for use with VAV systems in connection with the VAV compact controllers types G...B181.1E/3.

The RDU340 can also be used as an AHU temperature controller in connection with valve actuators, as well as for universal heating and cooling applications with DC 0...10 V actuators.

The RDU340 controls

- One DC 0...10 V actuator
- One DC 0...10 V actuator and AC 230V 1-stage electric heater

Use in systems with:

- Heating or cooling mode
- Automatic heating/cooling changeover
- Manual heating/cooling changeover
- Heating and cooling single duct (single duct with electric heater)

## Functions

---

- Maintain room temperature via built-in temperature sensor or external room temperature / return air temperature sensor
- Automatic or manual changeover between heating and cooling mode
- Select applications via DIP switches
- Select operating mode via the operating mode button on the thermostat
- Display current room temperature or setpoint in °C and/or °F.
- Minimum and maximum setpoint limitation.
- Button lock (automatic and manual).
- Two multifunctional inputs, freely selectable for:
  - Operating mode switchover contact (key card).
  - Automatic heating/cooling changeover sensor.
  - External room temperature or return air temperature sensor
  - Dewpoint sensor.
  - Electric heater enable.
  - Alarm input.
- Minimum and maximum limitation of air flow signal DC 0...10 V
- Reload factory settings for commissioning and control parameters.

## Applications



Prior to snapping the front panel to the base, use the DIP switches on the inner side of the front panel to commission the thermostat's applications and the behavior of the output signal.














DIP switch number	1	2
<b>Application</b>		
<ul style="list-style-type: none"> <li>• Single duct</li> <li>• Heating or cooling</li> <li>• Single duct, with electric heater</li> <li>• Heating and cooling , with electric heater</li> </ul>	OFF (factory setting) ON	n.a.
DC 0...10 V output signal normal	n.a.	OFF (factory setting)
DC 0...10 V output signal inverted	n.a.	ON

Note: During startup, the thermostat reloads the control parameter factory settings after each DIP switch settings change.

## Type summary

Product no.	Operating voltage	Control output			Backlit LCD	Infrared receiver	Housing color
		3-pos	on/off	DC 0...10 V			
<b>RDU340</b>	AC 24 V	--	✓	✓			white

## Equipment combinations

	<b>Designation</b>	<b>Product no.</b>	<b>Data Sheet</b>	
DC 0...10 V actuator	Cable temperature sensor 	<b>QAH11.1</b>	1840	
	Room temperature sensor 	<b>QAA32</b>	1747	
	Electrical actuator, DC 0...10 V (for radiator valve) 	<b>SSA61...</b>	4893	
	Electrical actuator, DC 0...10 V (for small valve 2,5 mm) 	<b>SSP61...</b>	4864	
	Electrical actuator, DC 0...10 V (for small valves 5.5 mm) 	<b>SSB61...</b>	4891	
	Electromotoric actuator, DC 0...10 V (for valves 5.5 mm) 	<b>SQS65...</b>	4573	
	Thermal actuator, DC 0...10 V (for small valves and radiator valves) 	<b>STS61</b>	4880	
		<b>GQD161...</b>	4605	
	DC 0...10 V damper / valve actuator		<b>GDB161...</b>	4634
			<b>GLB161...</b>	
		<b>GMA161...</b>	4614	
		<b>GEB161...</b>	4621	
		<b>GCA161...</b>	4613	
		<b>GBB161...</b>	4626	
		<b>GIB161...</b>		
VAV compact controller 		<b>GDB181.1E/3</b>	3544	

## Accessories

<b>Designation</b>	<b>Product no.</b>	<b>Data Sheet</b>
Changeover mounting kit (50 pcs/package)	<b>ARG86.3</b>	N3009
Plastic mounting bracket for semi-flush-mount thermostats for increasing the headroom in the conduit box by 10mm	<b>ARG70.3</b>	N3009
Conduit box for semi-flush mounted thermostat	<b>ARG71 / S55770-T137</b>	N3009

## Ordering

When ordering, indicate both product number and designation:

E.g. **RDU340 room thermostat**

Order valve actuators separately.


## Mechanical design

The thermostat consists of 2 parts:

- Front panel accommodating the electronics, operating elements and built-in room temperature sensor.
- Mounting base with the power electronics.


The rear of the mounting base contains the screw terminals. The base fits on a rectangular conduit box with 60.3 mm fixing centers. Slide the front panel in the mounting base and snap on.

## Operation and settings

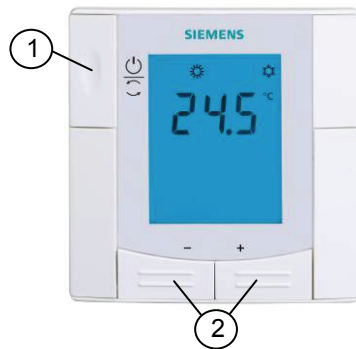

1. Operating mode selector / Protection
2. Adjust setpoint and control parameters

## Display

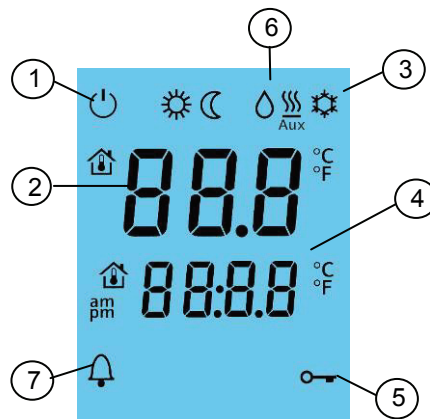


1. Operating mode  
 Protection  
 Comfort  
 Economy

2. Display room temperature, setpoints and control parameters.  
 Symbol used to display the current room temperature
3. Heating/cooling mode  
 Cooling mode  
 Heating mode,  
 Electric heater active
4. Additional user information
5. Button lock active
6. Condensation in room (dewpoint sensor active)
7. Indicate fault or reminder

## Mounting and installation

Mount the room thermostat on a recessed rectangular conduit box with 60.3mm fixing centers. Do not mount on a wall in niches or bookshelves, behind curtains, above or near heat sources, or exposed to direct solar radiation. Mount about 1.5 m above the floor.

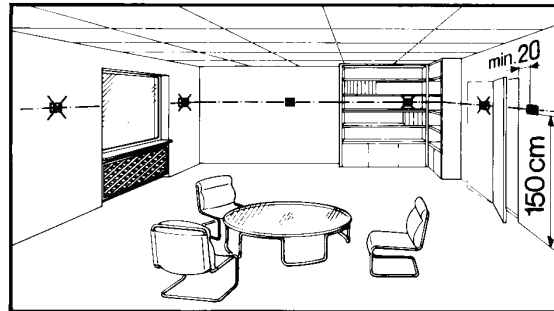

### Mounting



- Devices must be mounted on clean, dry indoor place without direct airflow from a heating / cooling device, and not be exposed to dripping or splashing
- In case of limited space in the conduit box use the mounting bracket ARG70.3 to increase the headroom by 10mm

### Wiring



See the mounting instructions M3078 enclosed with the thermostat.

- Comply with local regulations to wire, fuse and earth the thermostat.
- Properly size the cables to electric heater for AC 230 V mains voltage.
- Isolate the cables of SELV inputs X1-M/X2-M if the conduit box carries AC 230 V mains voltage.
- Inputs X1-M or X2-M of different units (e.g. summer/winter switch) may be connected in parallel with an external switch. Consider overall maximum contact sensing current for switch rating.
- No metal conduits
- No cables provided with a metal sheath
- Disconnect from supply before opening the cover

### Commissioning

Set the thermostat application via the DIP switches before snapping the front panel on the mounting base.

After power is applied, the thermostat carries out a reset during which all LCD segments flash indicating that the reset was correct. After the reset, which takes about 3 seconds, the thermostat is ready for commissioning by qualified HVAC staff. The control parameters of the thermostat can be set to ensure optimum performance of the entire system (see basic documentation P3078).

Note After powerfail the thermostat restarts in the same mode as before.

### Control sequence

- The control sequence may need to be set via parameter P01 depending on the application. The factory setting for the single duct application is "Cooling only".

### Calibrate sensor

- Recalibrate the temperature sensor if the room temperature displayed on the thermostat does not match the room temperature measured (after min. 1 hour of operation). To do this, change parameter P05.

### Setpoint and range limitation

- We recommend to review the setpoints and setpoint ranges (parameters P08...P12) and change them as needed to achieve maximum comfort and save energy.




## Disposal



The device is classified as waste electronic equipment in terms of the European Directive 2002/96/EC (WEEE) and should not be disposed of as unsorted municipal waste. The relevant national legal rules are to be adhered to. Regarding disposal, use the systems setup for collecting electronic waste. Observe all local and applicable laws.


## Technical data

⚠ Power supply	Operating voltage	SELV AC 24 V ±20%		
	Rated voltage	AC 24 V		
	Frequency	50/60 Hz		
	Power consumption	Max. 8 VA		
Outputs	Control output Y10-G0	SELV DC 0...10 V		
	Resolution	39 mV		
	Current	Max. ±1 mA		
Inputs	Control output Y21-L (N.O.)	AC 230 V		
	Rating	Max. 5(2) A		
	Multifunctional input X1-M/X2-M			
	Temperature sensor input:	Type	QAH11.1 (NTC)	
	Digital input:	Operating action	Selectable (N.O./N.C.)	
	Contact sensing		SELV DC 0...5 V/max 5 mA	
	Insulation against mains voltage (SELV)		4 kV, reinforced insulation	
	Function input:		Selectable	
		External temperature sensor, heating/cooling changeover sensor, operating mode switchover contact, dewpoint monitor contact, enable electric heater contact, alarm contact	X1: P38 X2: P40	
	Operational data	Switching differential, adjustable		
Heating mode		(P30)	2 K (0.5...6K)	
Cooling mode		(P31)	1 K (0.5...6K)	
Setpoint setting and range				
☀ Comfort		(P08)	21°C (5...40 °C)	
☾ Economy		(P11-P12)	15°C/30°C (OFF, 5...40 °C)	
⏻ Protection		(P65-P66)	8°C/OFF (OFF, 5...40 °C)	
Multifunctional input X1/X2		Selectable 0...6		
Input X1		Factory setting = 3 (P38)	Operating mode switchover	
Input X2		Factory setting = 2 (P40)	Heat/cool changeover sensor	
Built-in room temperature sensor				
Measuring range		0...49 °C		
Accuracy at 25 °C		< ± 0.5 K		
Temperature calibration range		± 3.0 K		
Settings and display resolution				
Setpoints	0.5 °C			
Current temperature value displayed	0.5 °C			

Environmental conditions	Operation	As per IEC 721-3-3
	Climatic conditions	Class 3K5
	Temperature	0...+50 °C
	Humidity	<95 % r.h.
	Transport	As per IEC 721-3-2
	Climatic conditions	Class 2K3
	Temperature	-25...+60 °C
	Humidity	<95 % r.h.
	Mechanical conditions	Class 2M2
	Storage	As per IEC 721-3-1
Standards and directives	Climatic conditions	Class 1K3
	Temperature	-25...+60 °C
	Humidity	<95 % r.h.
	 CE conformity	
	EMC directive	2004/108/EC
	Low-voltage directive	2006/95/EC
	 C-tick conformity to EMC emission standard	AS/NSZ 4251.1:1999
	 Reduction of hazardous substances	2002/95/EC
	Product standards	
	Automatic electrical controls for household and similar use	EN 60730-1
Special requirements for temperature-dependent controls	EN 60730-2-9	
Electronic control type	2.B (microdisconnection on operation)	
General	Electromagnetic compatibility	
	Emissions (residential)	IEC/EN 61000-6-3
	Immunity (industrial and residential)	IEC/EN 61000-6-2
	Protective class	II as per EN 60730
	Pollution class	Normal
	Degree of protection of housing	IP 30 to EN 60529
	Connection terminals	Solid wires or prepared stranded wires 1 x 0.4...2.5 mm <sup>2</sup> or 2 x 0.4...1.5 mm <sup>2</sup>
	Housing front color	RAL 9003 white
	Weight	0.220 kg



## Connection terminals

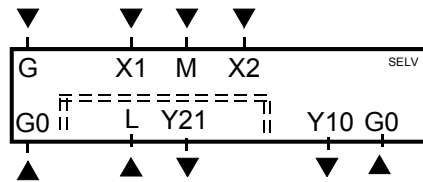


- G, G0 Operating voltage thermostat AC 24 V
- L Operating voltage for electric heater AC 230 V
- Y21 Control output for electric heater
- Y10 Control output for DC 0...10 V actuator
- X1, X2 Multifunctional input for temperature sensor (e.g. QAH11.1) or switch
- M Measuring neutral for sensor and switch

## Connection diagrams

Application:

**Single duct in VAV/CAV**

**Heating or cooling for universal or AHU**

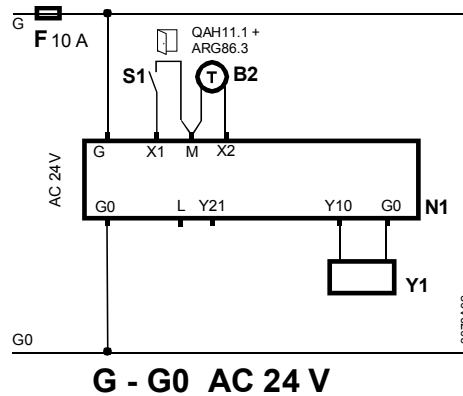


- N1 Room thermostat RDU340
- Y1 VAV / CAV system, DC 0...10V actuator for heating or cooling
- S1 Operating mode switch-over contact (e.g. key card)
- B2 Heat/cool changeover sensor

Application:

**Single duct with electric heater in VAV/CAV**

**Heating and cooling with electric heater for universal or AHU**

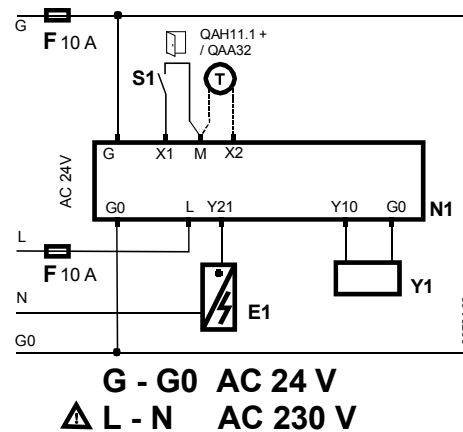

- N1 Room thermostat RDU340
- Y1 VAV / CAV system, DC 0...10V actuator for heating or cooling
- E1 Electric heater
- S1 Operating mode switch-over contact (e.g. key card)
- B2 Heat/cool changeover sensor

## Dimensions

Dimensions in mm

